


Схема

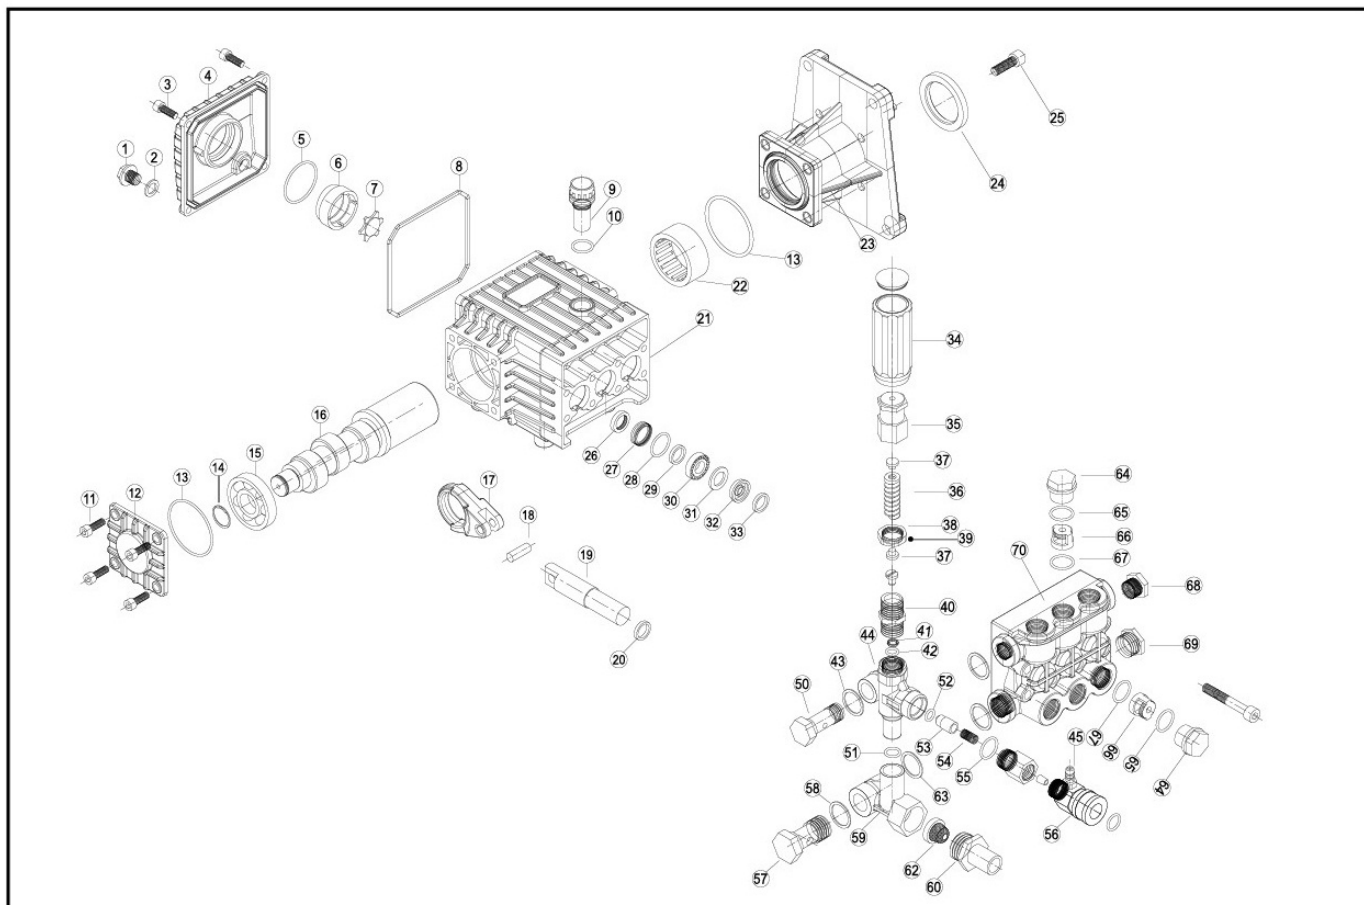

PARTS LIST

Ref No.	Description	Ref No.	Description	Ref No.	Description
1	Drain plug	25	Bolt	49	O-ring
2	Gasket	26	Oil seal	50	Outlet banjo bolt
3	Screw	27	Retainer ring	51	O-ring
4	Crankcase cover	28	O-ring	52	O-ring
5	O-ring	29	Low pressure seal	53	Checking valve
6	Side glass	30	Seal compaction ring	54	Spring
7	Fix clip	31	Seal Compaction flake	55	O-ring
8	O-ring	32	High-pressure seal	56	Outlet quick connector
9	Vented oil plug	33	Supporting ring	57	Inlet banjo bolt
10	O-ring	34	Plastic cap	58	O-ring
11	Bolt	35	Knob	59	By-pass housing
12	Crankshaft cover	36	Spring	60	Swivel nut
13	O-ring	37	Spring seat		
14	Strip ring	38	Jam nut	62	Inlet water filter
15	Ball bearing 6304 подшипник	39	Fix screw	63	O-ring
16	Crankshaft	40	Unloader Valve	64	Valve Plug
17	Connecting rod	41	Valve Seat	65	O-ring
18	Fix pin	42	O-ring	66	Checking valve assy
19	Ceramic plunger	43	O-ring	67	O-ring
20	O-ring	44	Valve housing	68	Outlet plug
21	Crankcase	45	Soap suction nozzle	69	Inlet plug
22	Needle bearing			70	Manifold head
23	Flange			71	Bolt
24	Oilseal				